KEY FEATURES

Effective and Economical Energy-saving & Environmentally-friendly

- Reliable operation.
- Cools a large area.
- Quiet running.
- Adjustable speed.
- Full function remote controller.
- Large water tank for extended time between fills.
- No need for compressed air.
- No installation, no duct work required.
- Easy to use, easy to clean.
- Body is corrosion-proof plastic.
- Easy to maintain.
- Fully portable.
- Can be attached to standard garden hose.
- Timer function for auto start or auto stop.

PORTABREEZE

www.portabreeze.com.au

Factory 3 / 20 CAPITAL COURT

BRAESIDE VICTORIA 3095

AUSTRALIA

(03) 9580 3214

enquiries@portabreeze.com.au

FACEBOOK https://www.facebook.com/pages/Portabreeze/575674909138425

PORTABREEZE

www.portabreeze.com.au

EVAPORATIVE AIR COOLER

User Manual



TROUBLESHOOTING

Malfunction	Reason	Remedy/Solution
-Operating screen stays dark	-No power -Main control board failure -Fuse is blown -Panel failure	-Check unit is plugged in -Change control board -Change fuse -Change panel
-Display is normal but without air flow or the air speed is too low	-The fan is jammed -Cooling pad or dust filter is blocked -Fan is distorted -Main control board failure	 -Check to ensure there is nothing preventing free rotation of the fan -Clean the cooling pad and dust filter -Change the fan -Change the main control board
-Motor does not respond to control panel	-Main control board failure -Panel failure	-Change the main control board -Change panel
-Water leaking from drain valve	-Drain valve is loose -Dirt in valve	-Tighten drain valve nut -Clean drain valve
-Water drops splash out of the air diffuser	-Water pipe has come loose	-Check water pipe to top of filter pad and reattach or tighten as necessary

NOTE: This troubleshooting is for reference purposes only. If any technical assistance is needed, please contact your distributor for service/repair

INTRODUCTION

Thank you for purchasing our product. We trust it will give you long and trouble free service.

The cooler is a high-tech product, showing simplicity and outstanding reliability, due to its European design origin.

Its working principle is that water evaporation uses up the surrounding heat and causes the temperature to cool down.

When water is continuously distributed onto the cooling pad surface, the air being drawn through the pad causes the water to evaporate, making the air cool and fresh. The circulating water moves down to the reservoir, where it is again pumped up through the cooling pads. If the hose option is being used (supplied as standard), a float valve keeps the reservoir full continuously. If filled manually, the big 60 Litre capacity reservoir ensures hours of uninterrupted operation. There is a digital level indicator to quickly check the amount of water remaining.

APPLICATIONS

This cooler is currently being used in many different industries and applications in many countries.

Company offices, shops, hospitals, schools, workshops, workers dormitories, outdoor teahouse/coffee bars, restaurants, recreation facilities.

Manufacturing:

Textile, machinery, ceramic, refined chemical industries, metallurgy, hardware and leather industries.

Industrial processing:


Electronics, clothes & shoe making, plastics, food industries, packaging.

Others:

Indoor sports courts, bakeries, playgrounds, laundries, kitchens, vegetable markets, gymnasiums, underground parking lots, greenhouses, chicken and pig farms, gardens, the list goes on...

TECHNICAL SPECIFICATION		
KMB-1B-1		
220-240/50		
550		
Axial		
10-15		
60		
1130×620×1410		
60		
150-200		
Т		

TECHNICAL FEATURE

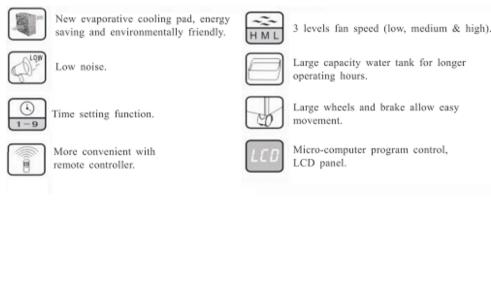


MAINTENANCE

For best results and long term operation, regular maintenance is essential.

To ensure the cooler delivers fresh and clean air, regularly change the water when dirty, and clean both the dust filter and the cooling pad.

- Remove the filter pad by unscrewing the 4 screws on the rear of the cooler, then lift the pad and pull out at the bottom to release. To replace the pad, slide up into the slot under the top of the cooler, push in at the bottom and allow to drop into the lower slot.
- Clean the pad from the inner-side to out-side of pad (inner side is towards motor). Never use any liquid detergent. Never use pressurized water, as it may cause damage to the pad.
- 3) Unscrew the drainage lid to let dirty water flow out, then clean the water tank thoroughly with a soft cloth. Wash off dirt on the water sensor, water pump and the float valve. Rinse thoroughly.
- 4) Use mild soap and soft clean cloth when cleaning the cooler casing. Do not use any caustic chemical detergent that may cause damage to the surface of the cooler.
- 5) To prevent buildup of algae and biological organisms in the reservoir, regularly add chlorine/bromine tablets as per tablet manufacturer recommendation for evaporative cooler reservoirs.

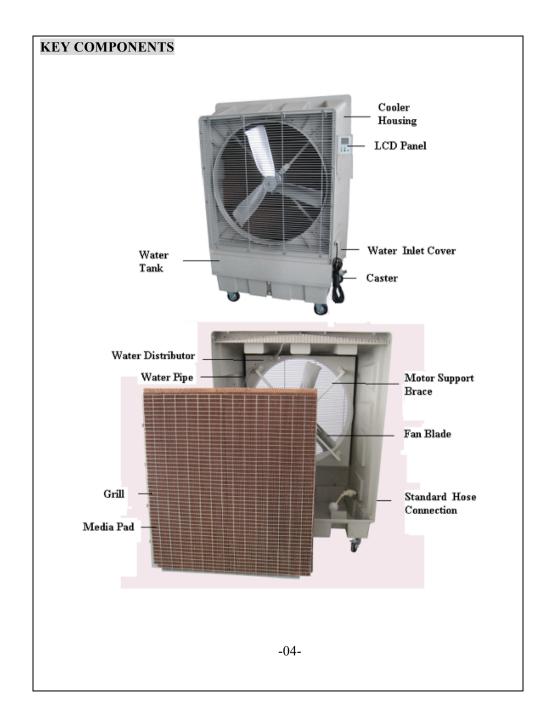

OPERATION INSTRUCTION

WARNING



1. All electrical repairs must only be carried out by a suitably qualified electrician, after all power is disconnected.

2. This cooler is not intended for use by children or persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge.

3. Children should be supervised to ensure that they do not play with the appliance.

Keypad Instruction	Comment	
ON/OFF	This turns the cooler on or off.	
COOL	This activates the cooling function. Note that there is a delay of one minute before the fan starts while the cooling pads wet up.	
BLAST	When COOL is pressed again, the water evaporation feature is turned off, with only the fan operating.	
SPEED	Pressing SPEED will select low, medium or high fan speed.	
TIMER Delayed start	The timer setting can be used to start the cooler after a certain number of hours delay. When only the green POWER light is on, press TIMER until the number of hours delay (1-24) is shown.	
TIMER Automatic stop	When the cooler is already going, press timer to set the number of hours (1-24) until the machine will automatically switch off.	
WATER SUPPLY	Use only clean, fresh water. Pour water into the water inlet on the right hand side of the unit (max 60L). Alternatively, attach a hose to the water inlet on the left side for automatic filling. Note a pressure reducing valve is recommended for high pressure water supplies.	